


OTPG4 FIRMWARE UPDATE – quick procedure

1. Connect device to the USB port




2. Open OTPG4 software

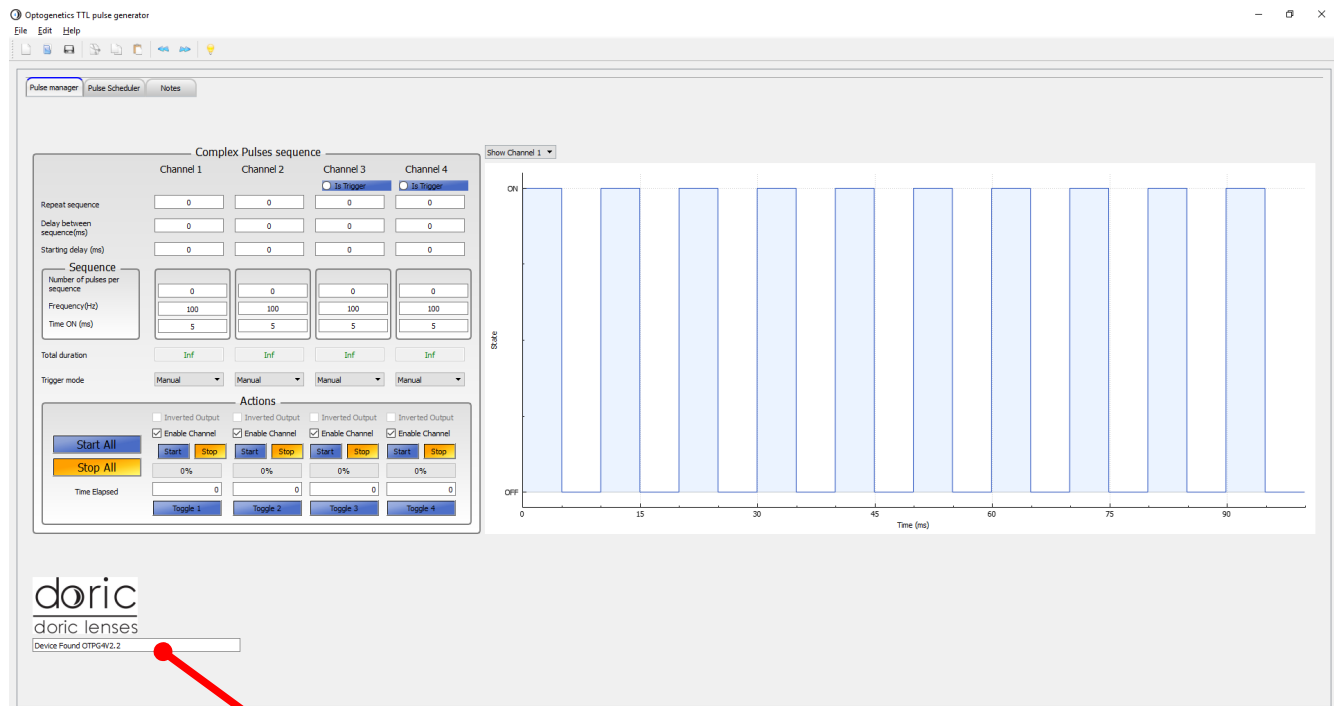


Firmware version is written here.


3. Click on Help – UpdateFirmware

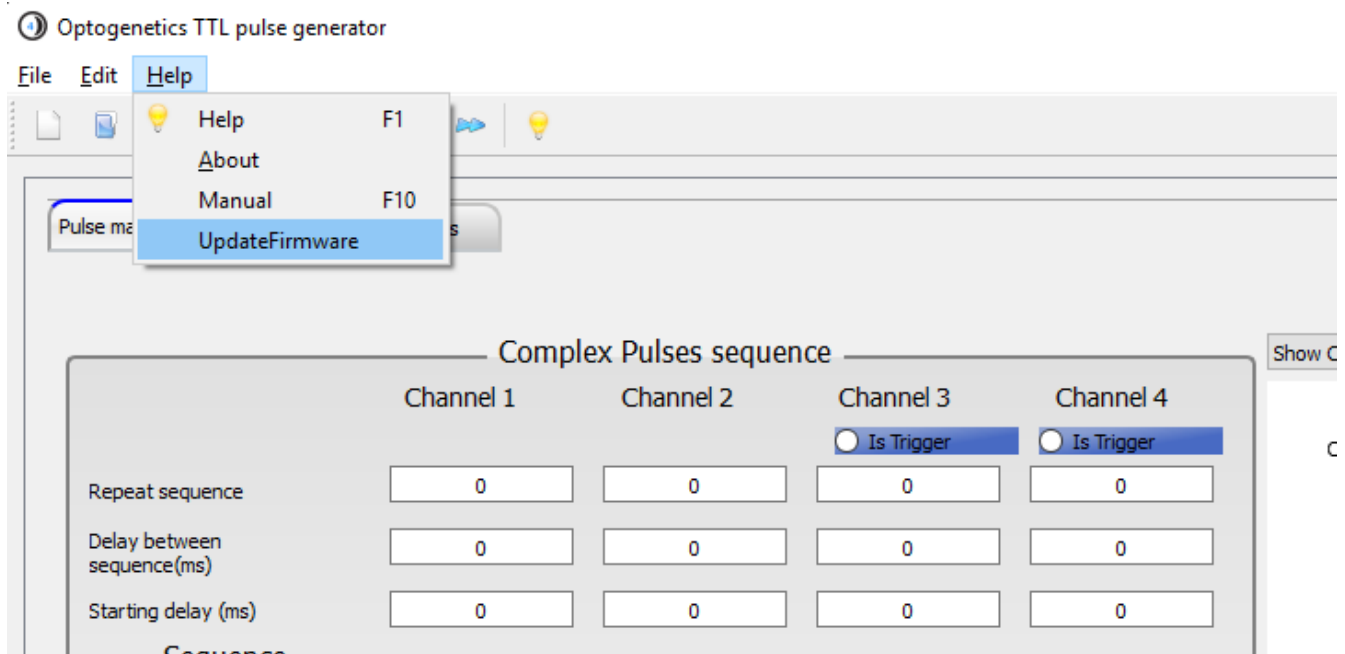

4. Follow the instructions below

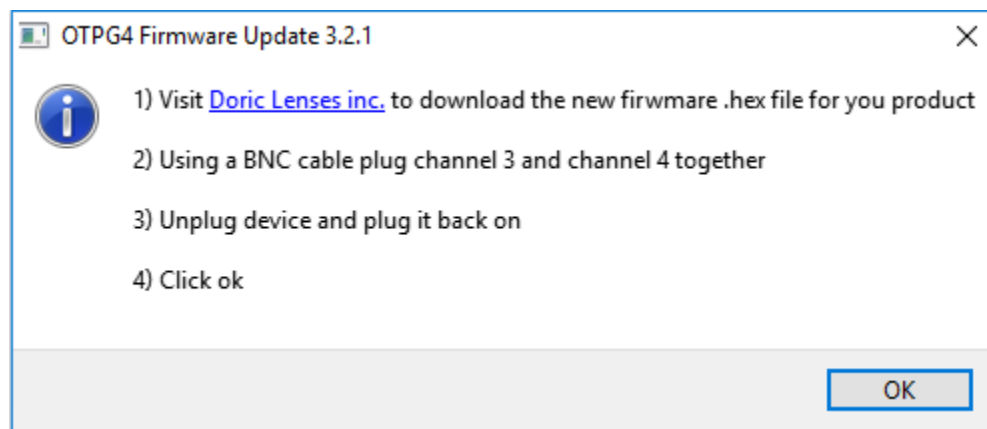


5. Connect channel 3 and channel 4 together with BNC cable.

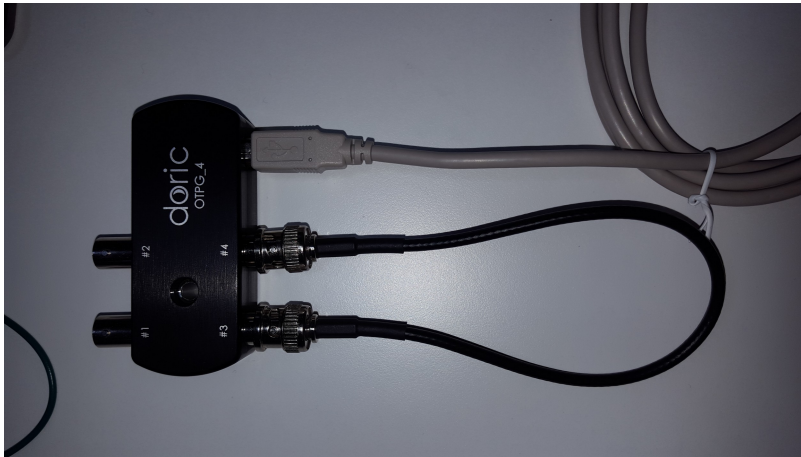


6. Unplug USB cable from device and plug it back


7. Click OK :

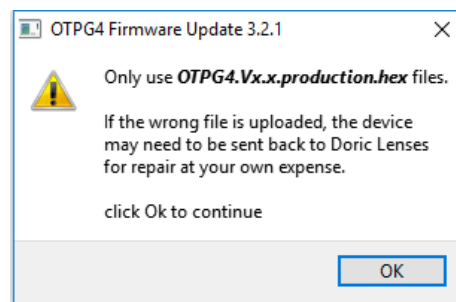

8. Click on Import Firmware Image and select the firmware version

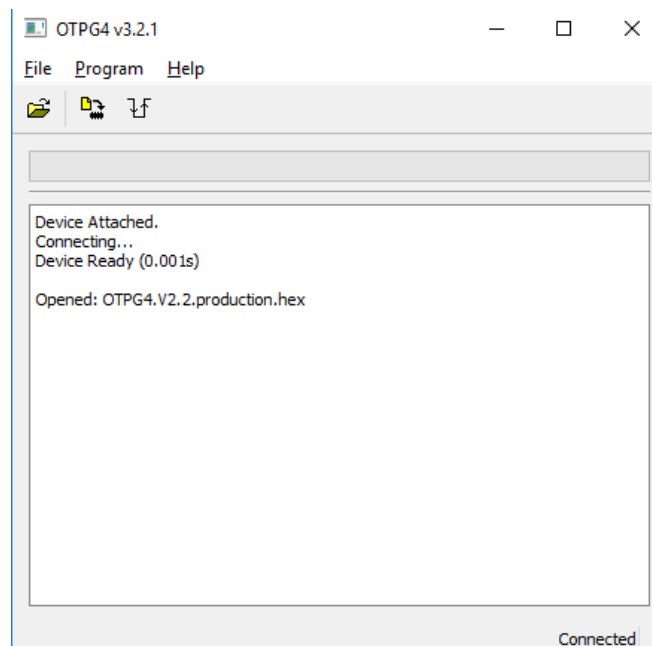

9. Click on Erase/Program/Verify Program

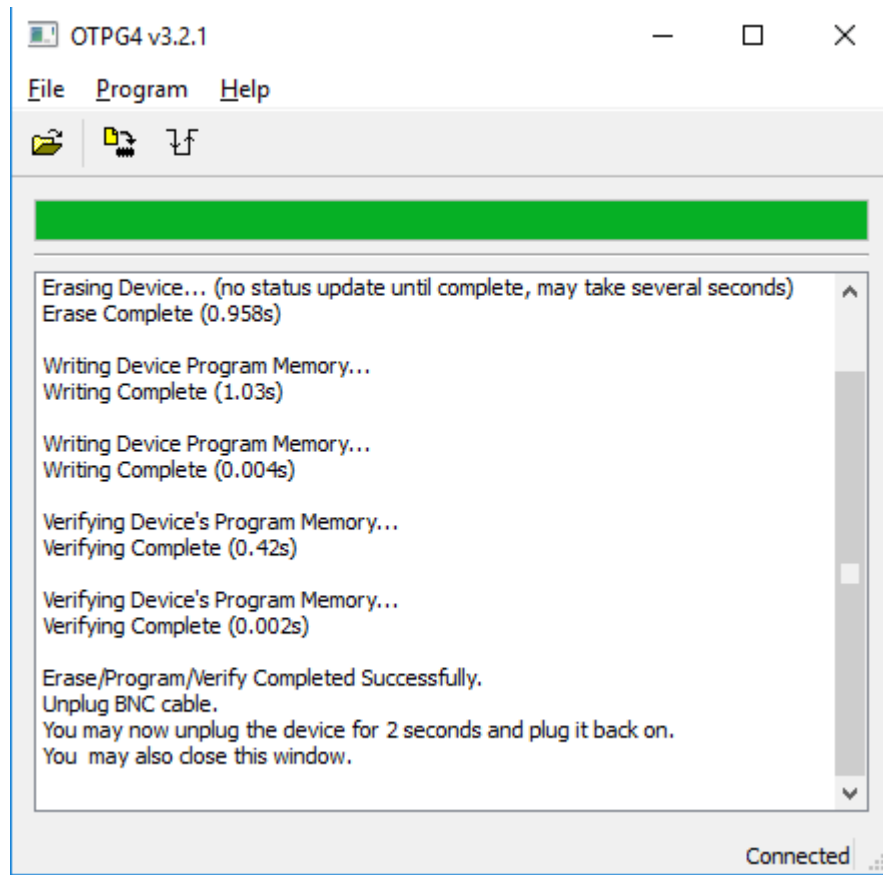

10. Unplug the BNC cable between channel 3 and channel 4

11. Unplug the device for two seconds and plug it back on.

Then you should be ready to go!